

User Manual

Installation

Compatible Models: Switch 2

The Joypad 2 securely attaches to both sides of the Switch 2 console via a built-in magnetic design

1. Note the Orientation, The left Joypad 2 features a "-" button, while the right one has a "+" button.

2. Wireless Mode: After removal from the console, the Joypad 2 can still function as a wireless controller

3. Note: The Joypad 2 does not feature infrared mouse functionality or NFC capabilities.

Pairing & Setup

Pairing Methods: Auto-Pairing: Attach the Joypad 2 to the console for automatic pairing. Manual Pairing:

Navigate to "Controllers" -, "Change Grip/Order" in the home menu, Press and hold the sync button (~1 second), then follow the prompts to press L+R (as a pair) or SL+SR (as a standalone controller).

Holding Methods

The Joypad 2 supports multiple holding styles:

Dual-Hand Grip: Hold two Joy pads vertically for independent button operation, ideal for multiplayer games

Vertical Grip: Hold a single Joypad vertically for shaking or button actions.

Horizontal Grip: Hold a single Joypad horizontally with both hands for tilt controls using the gyroscope.

Joypad Vibration Adjustment

Left Joypad: Increase vibration: Hold the "-" button and tilt the left joystick upward.

Decrease vibration: Hold the "-" button and tilt the left joystick downward.

Right Joypad: Increase vibration: Hold the "+" button and tilt the right joystick upward.

Decrease vibration: Hold the "+" button and tilt the right joystick downward

Motion Controls:

Equipped with a 9-axis motion-sensing system for enhanced motion gameplay.

Charging

Charge by attaching the Joypad 2 to the Switch 2 console

Compatibility & Notes

The Joypad 2 is not compatible with the Switch 1 and works exclusively with the Switch 2.

Re-Pairing:

If switching to a different console, reinstall and pair the controller

About upgrade Gamepad

First Please scan the QR code to Download files




MTD Software Upgrade Operation Instructions

1. Double-click to open the MTD_Joycon_FW_Update upgrade.exe tool, as shown in the figure:




2. The interface after opening is as shown in the following figure:

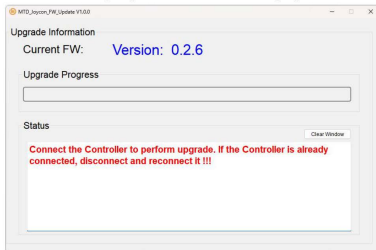


3. As shown in the following figure, connect the USB of the computer to the handle of the corresponding upgrade tool through the JOYCON handle or a dedicated connection cable (the left and right handles can be automatically recognized), as shown in the figure:



4. Once the upgrade tool detects the controller is connected, the software upgrade will start automatically, as shown in the figure:

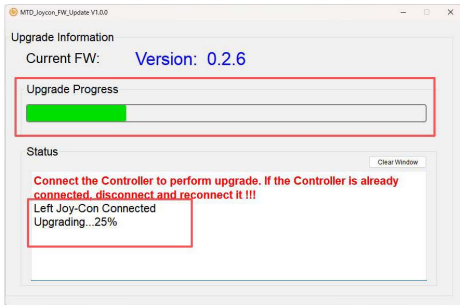

5. After the upgrade is completed, remove the game controller, as shown in the figure:

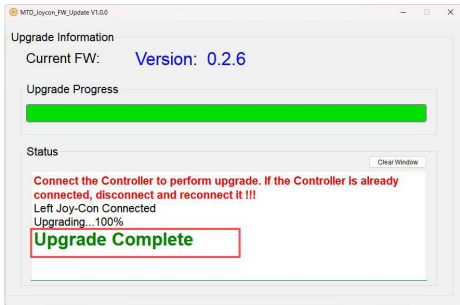

Special Declaration!!!!!! Please be aware that if the upgrade

when the software is opened again. Be sure to choose whether the controller being upgraded is on the left or right side. If you choose the wrong option, the left and right controllers will switch to the opposite program, and the controller will be unusable!!

